

# NETWORK DOCUMENTATION

260516-1001-PRN

**Evolis printer network  
installation guide.**

## CONTENT

This documentation explains how to install set and troubleshoot Evolis printer in network environment.

## ENVIRONMENT

- Evolis printer with Ethernet port or Wi-fi.
- Windows Operating System (XP SP 3 to 10).
- Linux or Mac OS Operating System

| Editorial Staff | Indice | Modification type | Author |
|-----------------|--------|-------------------|--------|
| 26/05/2016      | A0     | Creation          | FXB    |

## KEYWORD

1. EVOLIS NETWORK PRINTER
2. INSTALLATION / USE
3. TROUBLESHOOTING

## **Summary**

|                                                                                                                                     |           |    |
|-------------------------------------------------------------------------------------------------------------------------------------|-----------|----|
| <b>1. Introduction</b>                                                                                                              | <b>3</b>  |    |
| <b>2. Scope</b>                                                                                                                     | <b>3</b>  |    |
| <b>3. General check-list to set an Evolis network printer</b>                                                                       | <b>4</b>  |    |
| <b>4. Install a fixed IP printer (All driver release)</b>                                                                           | <b>4</b>  |    |
| 1. Collect required information                                                                                                     |           | 4  |
| 2. Plug your Evolis with USB cable to send commands                                                                                 |           | 5  |
| 3. Use case: Set a Fixed IP Evolis printer using commands                                                                           |           | 6  |
| 4. Installation via standard TCP/IP port                                                                                            |           | 7  |
| <b>5. Install network printer with Evolis Premium Suite</b>                                                                         | <b>9</b>  |    |
| 1. Prerequisite: Minimal mode installation                                                                                          |           | 9  |
| 2. Using Evolis Premium Suite Network installation wizard                                                                           |           | 10 |
| 3. DHCP or fixed IP address standard Installation sequence                                                                          |           | 10 |
| <b>6. Install network printer with previous range driver (ex: Quantum 2)</b>                                                        | <b>11</b> |    |
| <b>7. Primacy only: Wi-fi installation</b>                                                                                          | <b>12</b> |    |
| 1. Check the WI-FI option presence                                                                                                  |           | 12 |
| 2. Enable the Wi-fi adapter interface                                                                                               |           | 13 |
| 3. Collect information related to the wireless network                                                                              |           | 14 |
| 4. Installation with the Evolis Premium Suite network assistant                                                                     |           | 14 |
| 5. Wi-fi setup via command line                                                                                                     |           | 17 |
| <b>8. Troubleshooting</b>                                                                                                           | <b>18</b> |    |
| 1. Ensure that the settings has been validated                                                                                      |           | 18 |
| 2. Reset your Ethernet / WI-FI configuration to default using the power button (Zenius, Primacy, Elypso, KC200, KM5000 and KM2000): |           | 18 |
| 3. Reset network settings using commands                                                                                            |           | 18 |
| 4. Check connectivity with your printer                                                                                             |           | 19 |
| 5. Check your computer's configuration                                                                                              |           | 19 |
| <b>9. Most common Escape commands</b>                                                                                               | <b>19</b> |    |
| <b>10. Appendix</b>                                                                                                                 | <b>20</b> |    |
| 6. What is a multicast address?                                                                                                     |           | 20 |
| 7. How is set the hostname for Primacy or Zenius printer                                                                            |           | 20 |
| 8. Mac address on Evolis Printer                                                                                                    |           | 20 |
| 9. What is DHCP ?                                                                                                                   |           | 20 |
| 10. Retrieve compliant configuration from a computer                                                                                |           | 21 |

## 1. Introduction

This guide intends to provide necessary information to be able to configure an Evolis printer in network environment (Local Area Network).

This documentation release **does not** cover Remote Desktop, Terminal services, Citrix environment and Server Operating System.

Changing the printer's basic settings without prior knowledge of the layout of the LAN in question or without genuine technical knowledge may result in a malfunction of the printer, and may even extend to failure of all or part of the LAN. Contact your System and Network Administrator before connecting to or changing the settings for your local area network.

## 2. Scope

| Printer with Ethernet port available                                                                      | Evolis Premium Suite (Windows only) | Linux / Mac OS |
|-----------------------------------------------------------------------------------------------------------|-------------------------------------|----------------|
| Primacy, Zenius (Expert only), Elypso, KC200/B, KM500B – KM2000B                                          | Yes                                 | Yes            |
| Dualys, Dualys 2, Dualys 3, Pebble, New Pebble, Pebble 3, Pebble 4, Quantum, Quantum 2, Securion, Tatoo2. | No                                  | Yes            |

Table above summarizes printer that has a network interface.

Printers that use the Evolis Premium Suite require a specific configuration described in [section 1 of the prerequisite](#).

The network speed of the embedded Ethernet interface for Evolis printer is 100 Mbits full duplex, also compliant with half-duplex configuration.

This guide is not to set an Avansia printer that has a specific network.

Only Primacy printer is Wi-fi enabled, please refer [to dedicated section](#).

The compliant Wi-fi norms for Primacy printer (only) are "B" and "G". The speed is up to 54 Mbits/s in the best possible conditions. The wireless range and data speed transmission may vary depending of your physical environment (building, closed area, metallic structure) and driver settings. For more information, do not hesitate to consult <http://www.ieee802.org/11/> (external reference).

Example and screenshot provided in this documentation rely on a Windows 7 /Windows XP Operating system, Mac OS Yosemite and Linux Ubuntu 16.04. Depending on your Operating System and configuration, some details (mostly graphical elements) may vary.

Setup of Evolis Premium Suite release used to write this documentation is 6.22.0.638, driver release for Linux and Mac rely on setup release 6.5.1.86 (both available on the Evolis Website [www.evolis.com/drivers-support](http://www.evolis.com/drivers-support) section).

Firmware release used for this documentation is 1604 (Zenius, Elypso, Primacy printer, KC200/B, KM500/B and KM 2000/B), other printer's model (Quantum 2, Securion) has the latest firmware release

Currently, **only** magnetic encoding is held within a network environment (no smart encoding and no contactless encoding) for our standard range.

We do not use any third party communication protocol (Adobe Postscript, Hewlett Packard PCL) to communicate with our printer but our own communication protocol (raw communication on port 9100).

### 3. General check-list to set an Evolis network printer

- **Do not plug at the same time the USB cable and the network cable.** Plug your printer directly on your network if you plan to use DHCP, in case you plan to use Fixed IP address, please read carefully the following section "Install a fixed IP printer".
- **Check Firewall and Antivirus configuration:** it must be set to authorize communication on port 9100, you must have at least "power user" rights to perform Evolis network printer's installation.
- **IPv4 protocol:** Evolis printer is compliant with IP V4 communication protocol only (no IP V6). The port use to communicate with our printer is 9100 (Evolis raw printing port).
- **Multicast:** Pay attention that the protocol used to discover the printer on a network is multicast so then the routing table on your network equipment (router, server ...) must be configured accordingly to your network architecture to allow communication.
- **Led Status:** Check the two status led at the rear of the Evolis printer to ensure communication is correct.



Primacy example :

LED: Green LED  
On = 10Mbit/s  
Off = 100Mbit/s  
Orange LED  
On = Printer connected to network  
Flashing = Printer connected and network traffic

### 4. Install a fixed IP printer (All driver release)

#### 1. Collect required information

In case of a fixed IP address, you need to know at least the following elements to make it work on your network:

- **IP address** (ex: 192.168.1.23)
- **Subnet mask** (ex : 255.255.255.0)
- **Gateway** (ex: 192.168.1.254)

Optionally you may have to configure:


- **Wins Server** (ex: 192.168.1.1)
- **Multicast IP address** (ex: 224.69.86.79, described in RFC988, external [link](#))

***In most of the situation, you need to request those settings to IT department or technical team of the company where you plan to install the Evolis Network printer.***

## 2. Plug your Evolis with USB cable to send commands


An efficient (no communication loss, fast) and easy way to communicate with an Evolis printer is to plug it first USB and install it for complete network manual configuration. Then you can delete the newly created USB printer and connect to network using wizard or manual installation described in this documentation.

**Windows Operating System:** To set your Evolis printer, you may use the graphical utility provided in the maintenance section of the minimal properties of the Evolis Premium Suite (available from the Windows start menu: "Evolis Card Printer\Evolis Premium Suite\Tools\ Evolis Printer properties (Minimal mode)"):

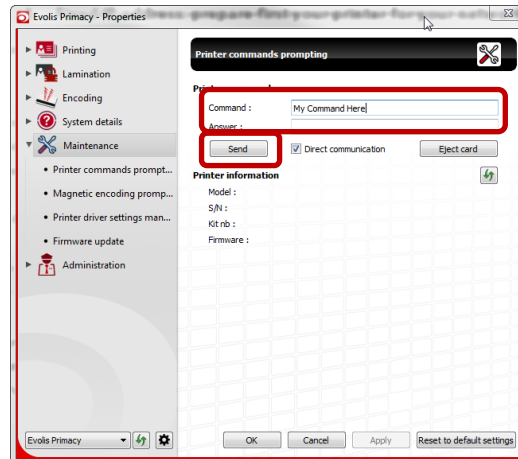

- 1 Type your command
- 2 click on "Send" to validate
- 3 If success printer returns « OK » answer or value of the parameter

For previous range printer, you can use the dialog tool that is available in utility tab of the driver properties (Quantum2 example below, from Microsoft printer and devices window)

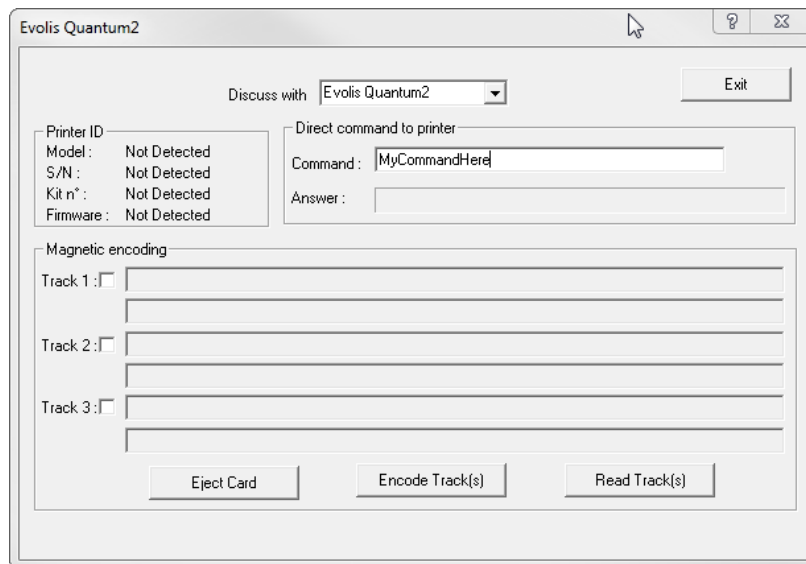

Optionally use Evocom utility under Windows environment:


```
Administrator: C:\Windows\system32\cmd.exe
c:\Program Files\Evolis Card Printer\Evolis Premium Suite\Tools>EvoCom -p"Evolis Primacy" Rip
11.1.24.99
c:\Program Files\Evolis Card Printer\Evolis Premium Suite\Tools>
```

**Evolis Premium Suite:** The default path for Evocom utility is "C:\Program Files\Evolis Card Printer\Evolis Premium Suite\Tools\"

**Previous generation driver:** The default path for Evocom utility is “C:\Program Files\Evolis Card Printer\Drivers “Printer Model”\bin (ex: C:\Program Files\Evolis Card Printer\Drivers Dualys3\bin).

**Linux:** please contact your Evolis official distributor for additional details.

**Mac OS:** Use the comtool utility that is available from the “Printer & Scanners” window, then “Options and supplies...” menu, “Utility tab”, finally “Open Printer Utility”.

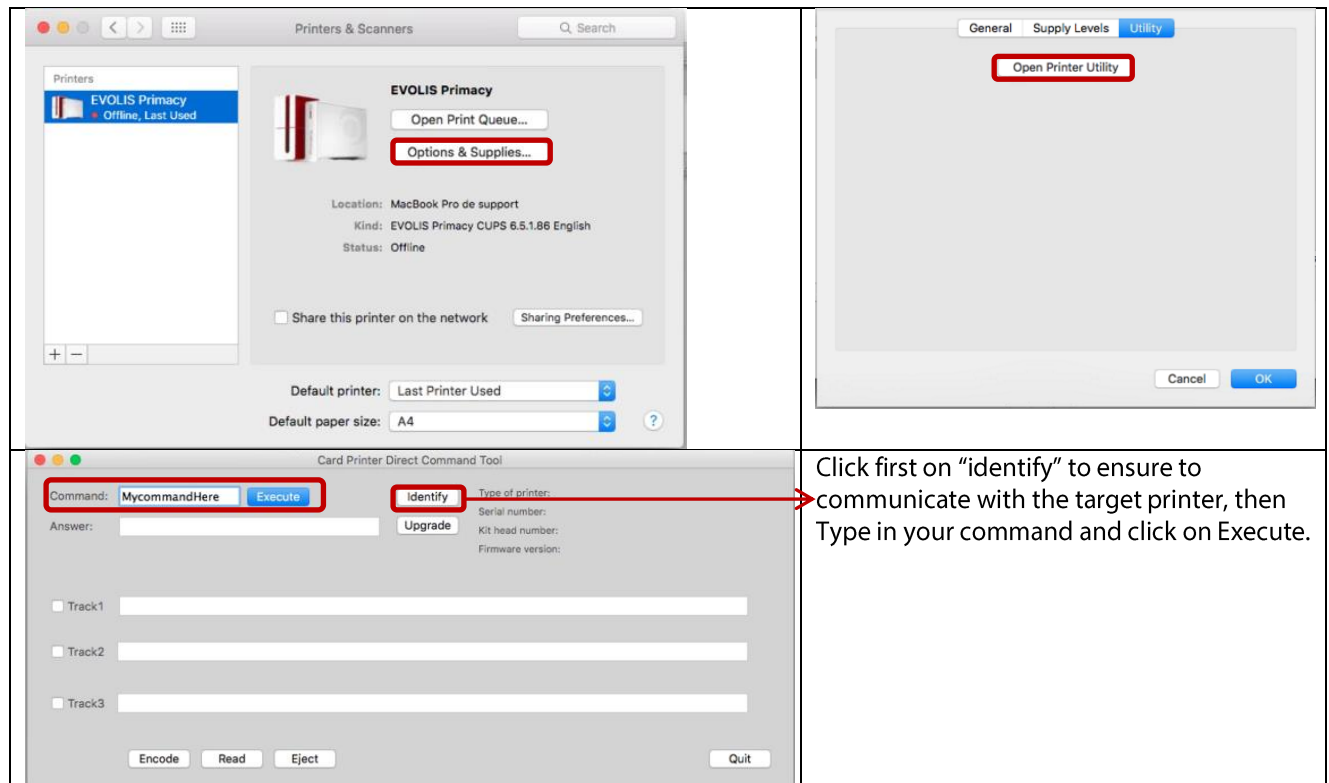

### 3. Use case: Set a Fixed IP Evolis printer using commands

Send the command using the communication tools that are detailed in the [previous section](#).

Pay attention that all Evolis commands begin with a capital letter, the separator for parameters and options is “;” (semicolon), example command: **Pip;DHCP** (to set the printer in DHCP mode)

If you do not respect this rule or send an incorrect option or parameter, then you will get an “ERRCDE” or “ERROR PARAMETER” message.

#### Mandatory settings example sequence:

| Step | Command            | Short description                          |
|------|--------------------|--------------------------------------------|
| 1    | Pip;192.168.1.25   | Set the IP address to “192.168.1.25” value |
| 2    | Rip                | Read The IP address set                    |
| 3    | Penm;255.255.255.0 | Set the network mask to “255.255.255.0”    |
| 4    | Renm               | Read the network mask value set            |
| 5    | Pegw;192.168.1.254 | Set the default gateway                    |
| 6    | Regw               | Read the gateway value set                 |
| 7    | Snetw              | Validate settings                          |

#### Optional settings example sequence

| Step | Command            | Short description                                  | Comments                                   |
|------|--------------------|----------------------------------------------------|--------------------------------------------|
| 1    | Pews;192.168.1.1   | Set the Wins server address to "192.168.1.1" value |                                            |
| 2    | Rews               | Read the Wins server address                       |                                            |
| 3    | Pmip; 224.69.86.79 | Set the multicast IP to "224.69.86.79"             | Evolis recommends not to modify this value |
| 4    | Renm               | Read the network mask value set                    |                                            |
| 5    | Pegw;192.168.1.254 | Set the default gateway                            |                                            |
| 6    | Regw               | Read the gateway value set                         |                                            |
| 7    | Snetw              | Validate settings                                  |                                            |

**Pay attention to restart the printer for all the settings to take effect, or use "Snetw" command to apply the new network settings.**

#### 4. Installation via standard TCP/IP port


To configure the printer, select the 'Properties' function in your printer driver, then the '**Ports**' tab, and then '**Add a port**':




Select the 'Standard TCP/IP Port' row and click on 'Add a port' ...; select **Standard TCP/IP Port**




The Windows installation wizard starts up, click on 'Next' to continue.

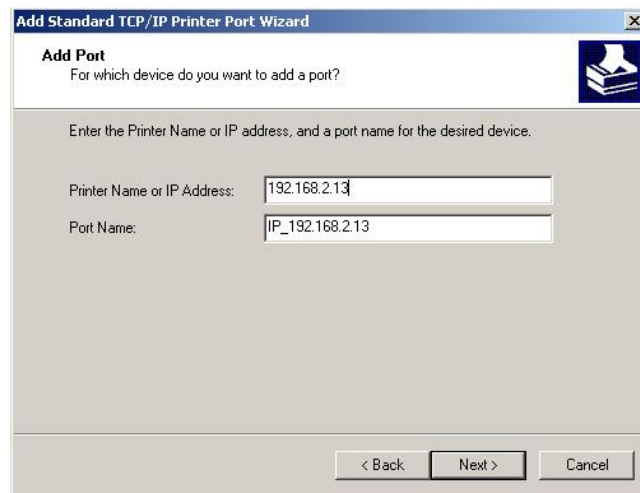

Enter the printer's IP address in the first field, and then click on 'Next'.

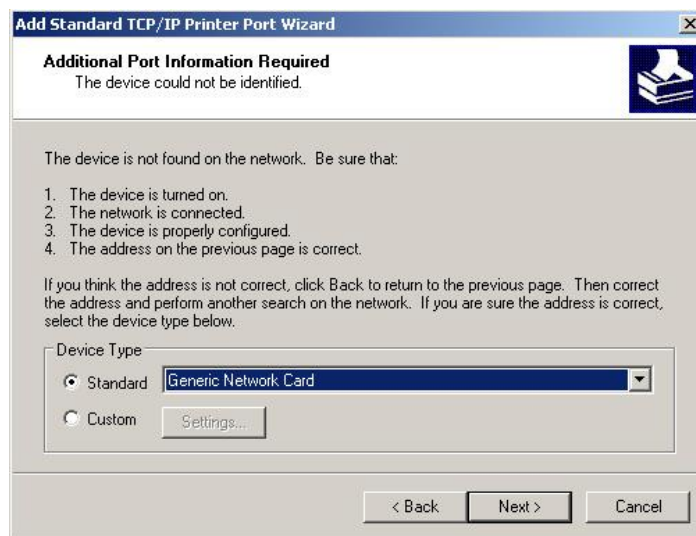

Select the network card then click on 'Next'.

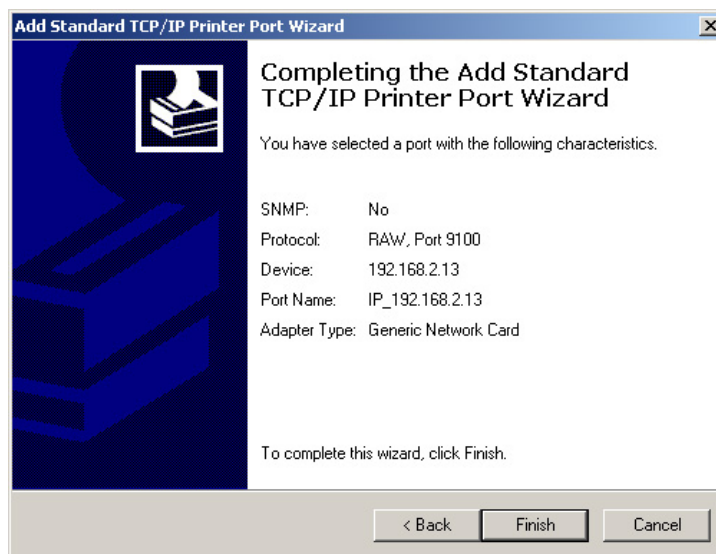


The installation confirmation window is displayed, stating your printer's properties. Click on 'Finish' to complete the installation.



## 5. Install network printer with Evolis Premium Suite

### 1. Prerequisite: Minimal mode installation


You need to install your Evolis Premium Suite in **Minimal mode** to make your Evolis network printer to work correctly, screenshot below:

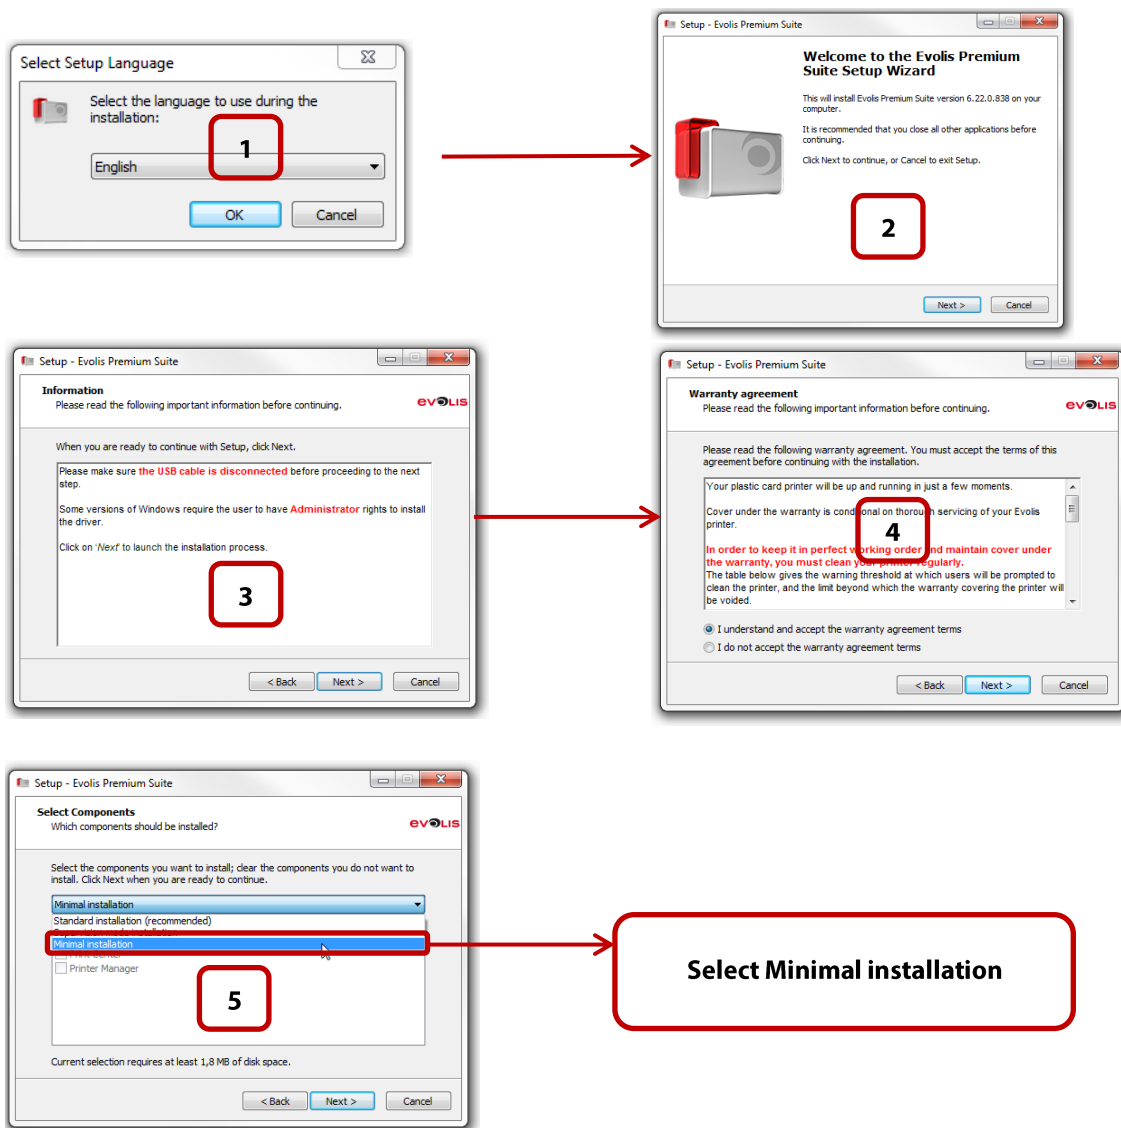


Pay attention that the Minimal installation does not include printer supervision (status of the printer in the Print Center and Printer Manager pop-up notifications in the Windows system tray).


## 2. Using Evolis Premium Suite Network installation wizard

The network installation wizard is available from the Windows start menu  -> "Evolis Card printer" folder -> "Evolis Premium Suite" -> "Tools" folder.

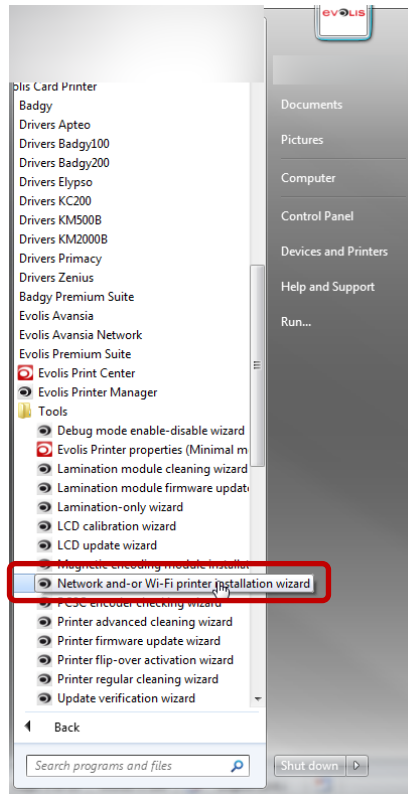


## 3. DHCP or fixed IP address standard Installation sequence

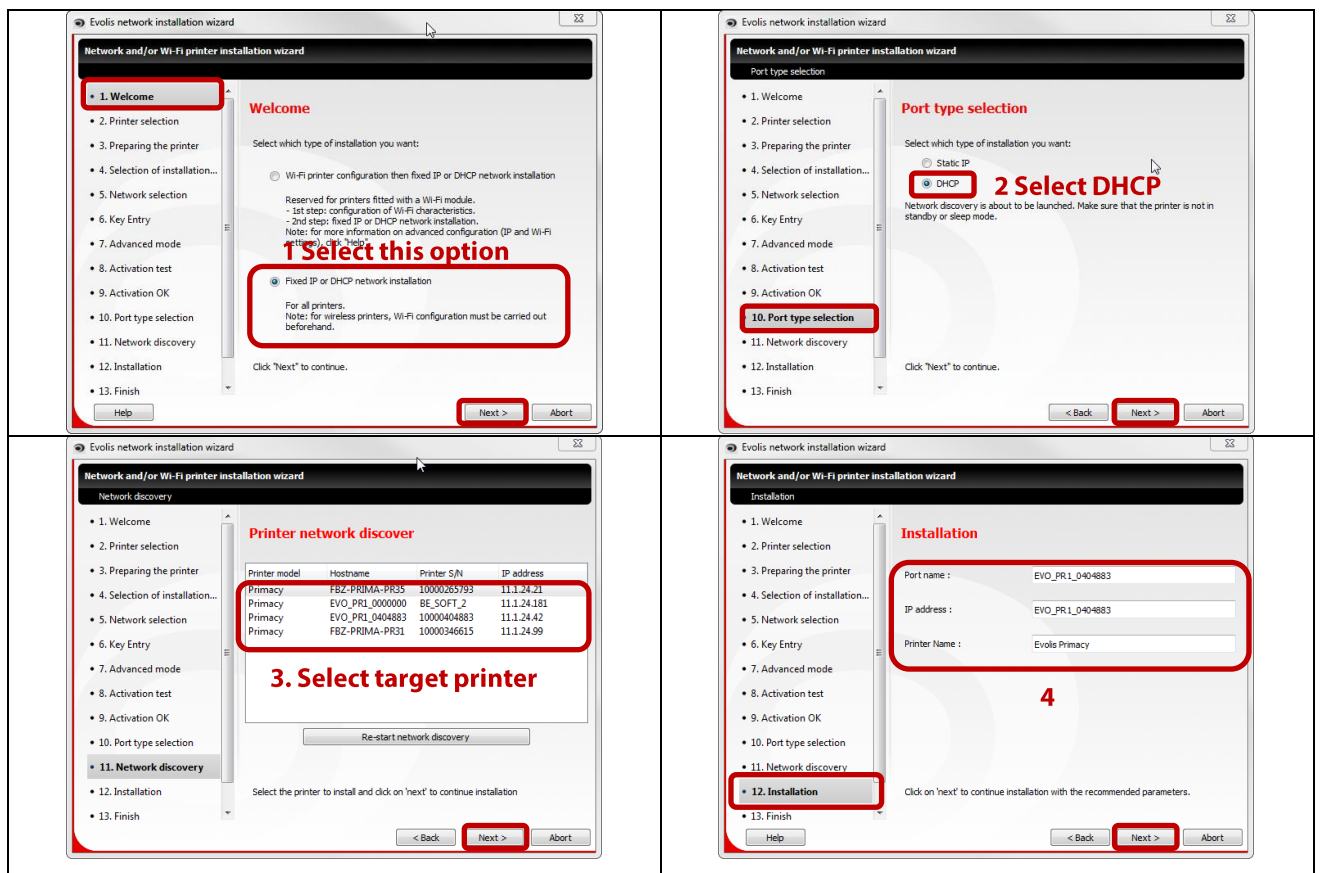

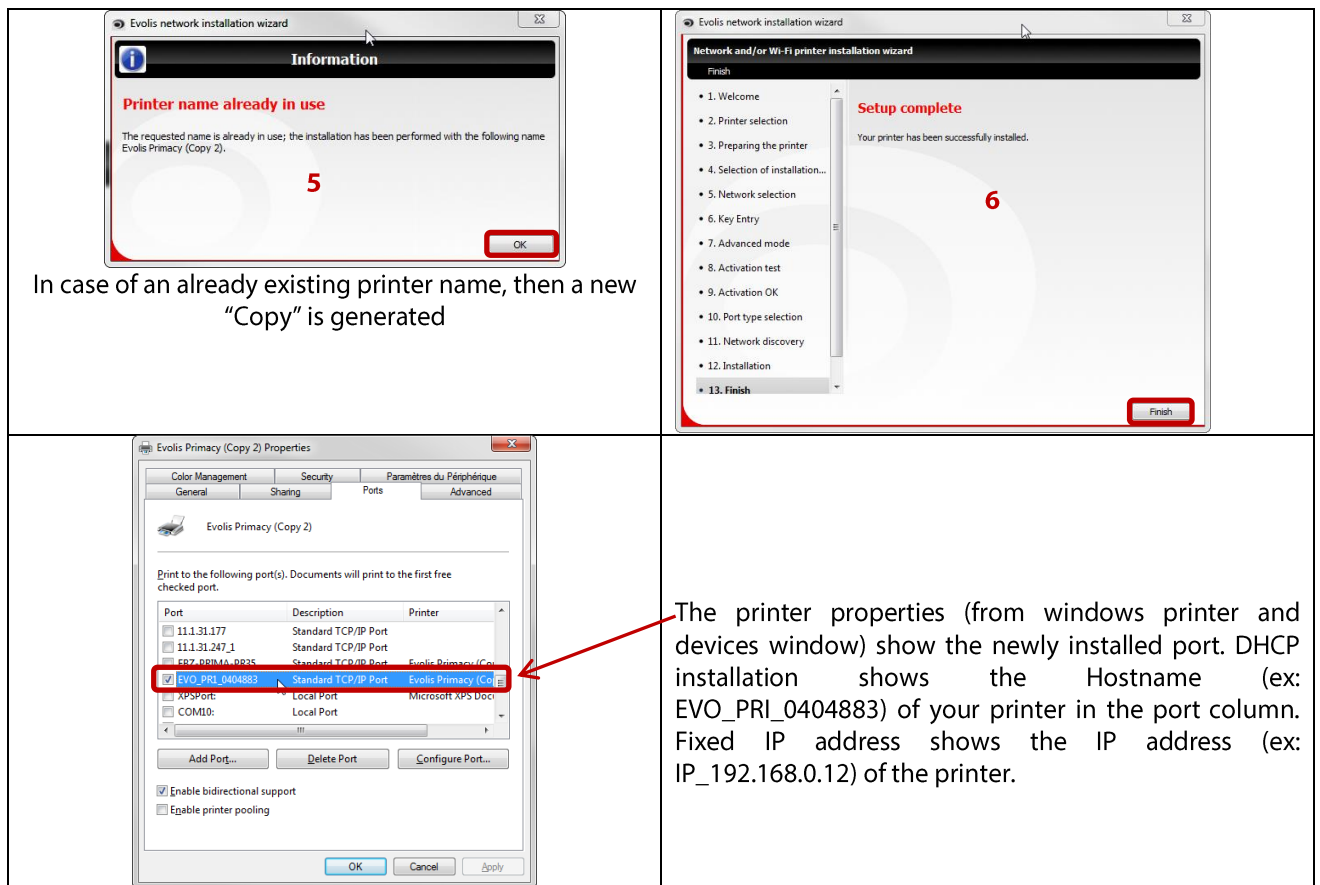

## 6. Install network printer with previous range driver (ex: Quantum 2)

Printer with the previous version of the Evolis driver can install directly their printer driver and then use the Ethernet wizard during the installation process:

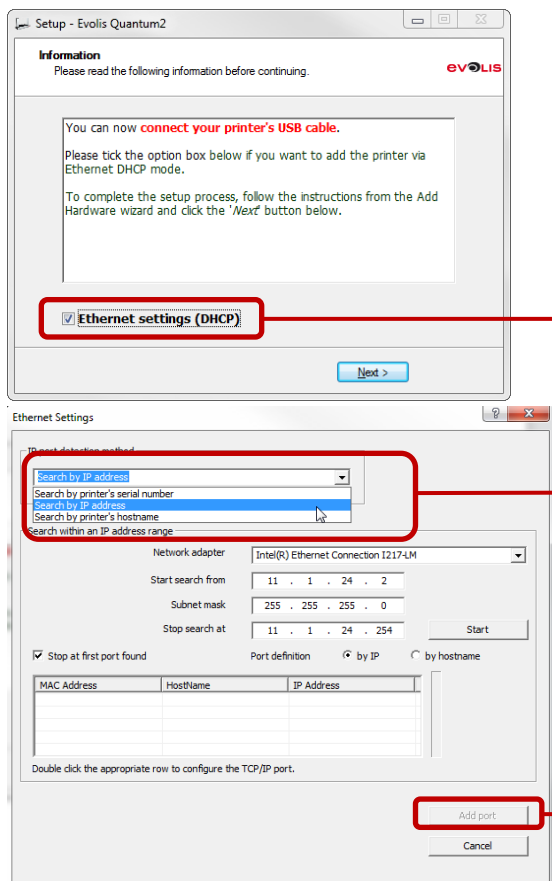

Tick the Ethernet Settings (DHCP) to start procedure.

Select the detection mode:  
Printer's serial number  
IP address  
Printer's hostname


Finally click the "Add port" Button corresponding to target printer.

## 7. Primacy only: Wi-fi installation

### 1. Check the WI-FI option presence

- Physically on the printer

First check on the Primacy control panel for the presence of the WI-FI option (schematic below):

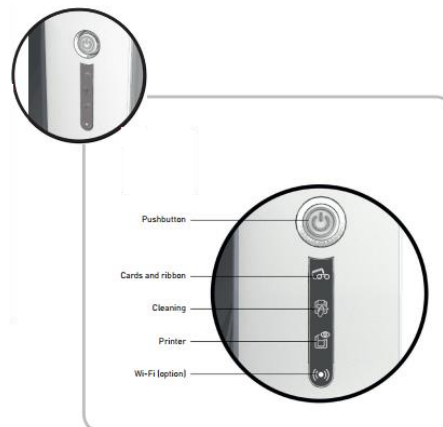

Pay attention that the **Wi-fi is factory setting only** (option not upgradable), that means if you require Wi-fi you need to order Primacy that already has option.

- Using Commands

Default Primacy configuration out of the box is Ethernet interface enabled and Wi-fi interface disabled.

To first check if the WI-FI option is present or not, use the **"Rtp;w"** (Read printer Type; Wifi) command, detailed below :


| Escape sequence: | Presence of Wi-fi module                                                               |
|------------------|----------------------------------------------------------------------------------------|
| Command          | <b>Rtp;w</b>                                                                           |
| Return           | <b>0 or 1</b>                                                                          |
| Description      | <b>1</b> if the Wi-fi module is present<br><b>0</b> if the WI-FI module is not present |

Example command:

```
C:\Program Files\Evolis Card Printer\Evolis Premium Suite\Tools\Evocom -p"Evolis Primacy" Rtp;w  
1
```

*This command shows a WI-FI enabled printer because it returns "1" value.*


You can also use the "Maintenance" section of the Evolis Premium Suite shown below to send commands:

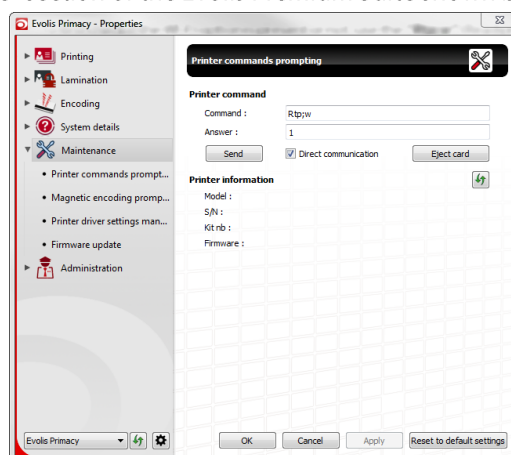


## 2. Enable the Wi-fi adapter interface

- Enable Wi-fi via the web interface

Type the IP address of the Evolis Primacy printer in a web browser address bar (i.e. Internet Explorer, Mozilla Firefox, Google Chrome), validate by enter, example below :



In the Wireless section, turn the Mode from "Disable" to "Enable"

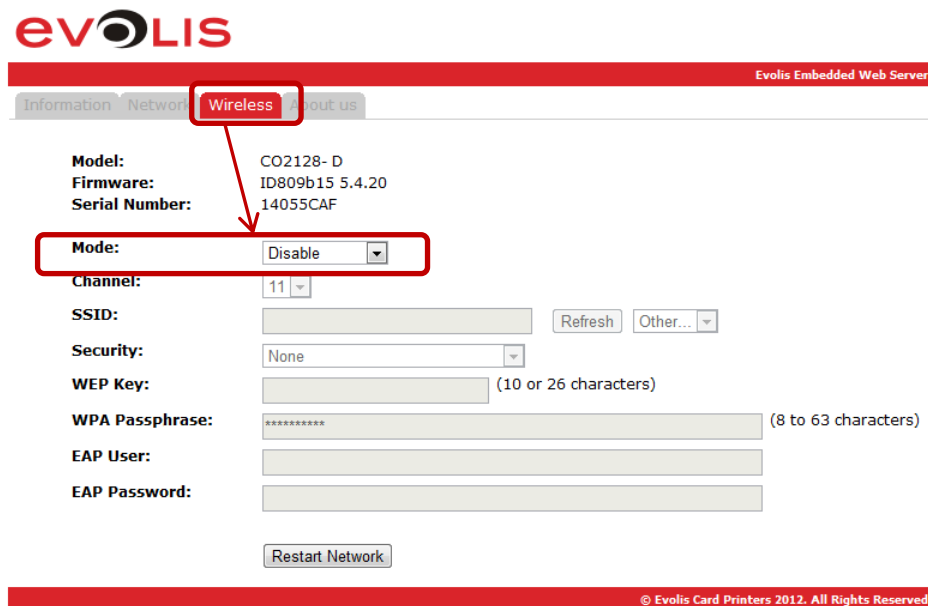

evolis

Information Network **Wireless** About us

Model: CO2128- D  
Firmware: ID809b15 5.4.20  
Serial Number: 14055CAF

Mode: **Disable**

Channel: 11

SSID: Refresh Other...

Security: None

WEP Key: (10 or 26 characters)

WPA Passphrase: (8 to 63 characters)


EAP User:

EAP Password:

Restart Network

© Evolis Card Printers 2012. All Rights Reserved

Once it is enabled, the Wi-fi settings become available (fields are fillable and turn from grey to white color).

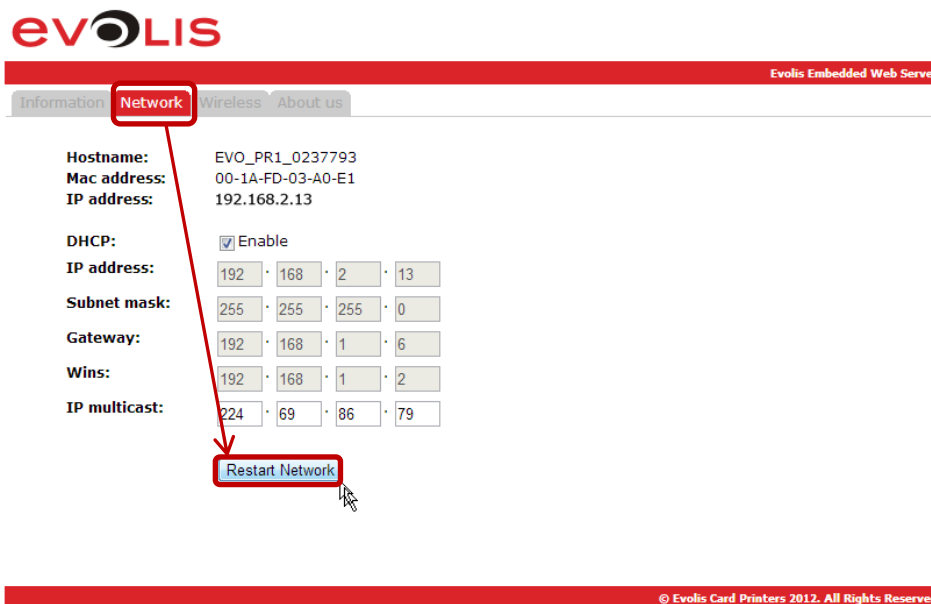

evolis

Information **Network** Wireless About us

Hostname: EVO\_PR1\_0237793  
Mac address: 00-1A-FD-03-A0-E1  
IP address: 192.168.2.13

DHCP: ☒ Enable

IP address: 192 · 168 · 2 · 13

Subnet mask: 255 · 255 · 255 · 0

Gateway: 192 · 168 · 1 · 6

Wins: 192 · 168 · 1 · 2

IP multicast: 224 · 69 · 86 · 79

Restart Network

© Evolis Card Printers 2012. All Rights Reserved

To complete configuration, fill in the correct information in the Network section and then Click on restart network

- Enable Wi-fi via the command line

To send commands to the printer, please rely on

| Step | Command     | Short description                                                 | Possible Values                                         |
|------|-------------|-------------------------------------------------------------------|---------------------------------------------------------|
| 4    | Pwifi;MDE;2 | Disable the Wi-fi (0), Ad hoc (1), or connect to SSID network (2) | 0 : Wi-fi Disable<br>1 : Adhoc Mode<br>2 : SSID network |
| 5    | Rwifi;MDE   | Read the Wi-fi mode                                               | 0 : Wi-fi Disable<br>1 : Adhoc Mode<br>2 : SSID network |

The most common configuration is Pwifi;MDE;2 (SSID Network).

Example command:

```
C:\Program Files\Evolis Card Printer\Evolis Premium Suite\Tools\Evocom -p"Evolis Primacy" Pwifi;MDE;2
OK
```


### 3. Collect information related to the wireless network









Router wireless setup varies from manufacturer to manufacturer. You should follow the instructions that came with your router to pair your printer with your router.

To connect your printer to the wireless network, you need the following information:





- **SSID or Network name**
- **Security Type or Encryption (WEP; WPA, WPA2 personal, WPA2 enterprise)**
- **Password, Network key or Passphrase**
- **Method to pair printer with the network equipment (WPS, router configuration, pairing button...)**

### 4. Installation with the Evolis Premium Suite network assistant

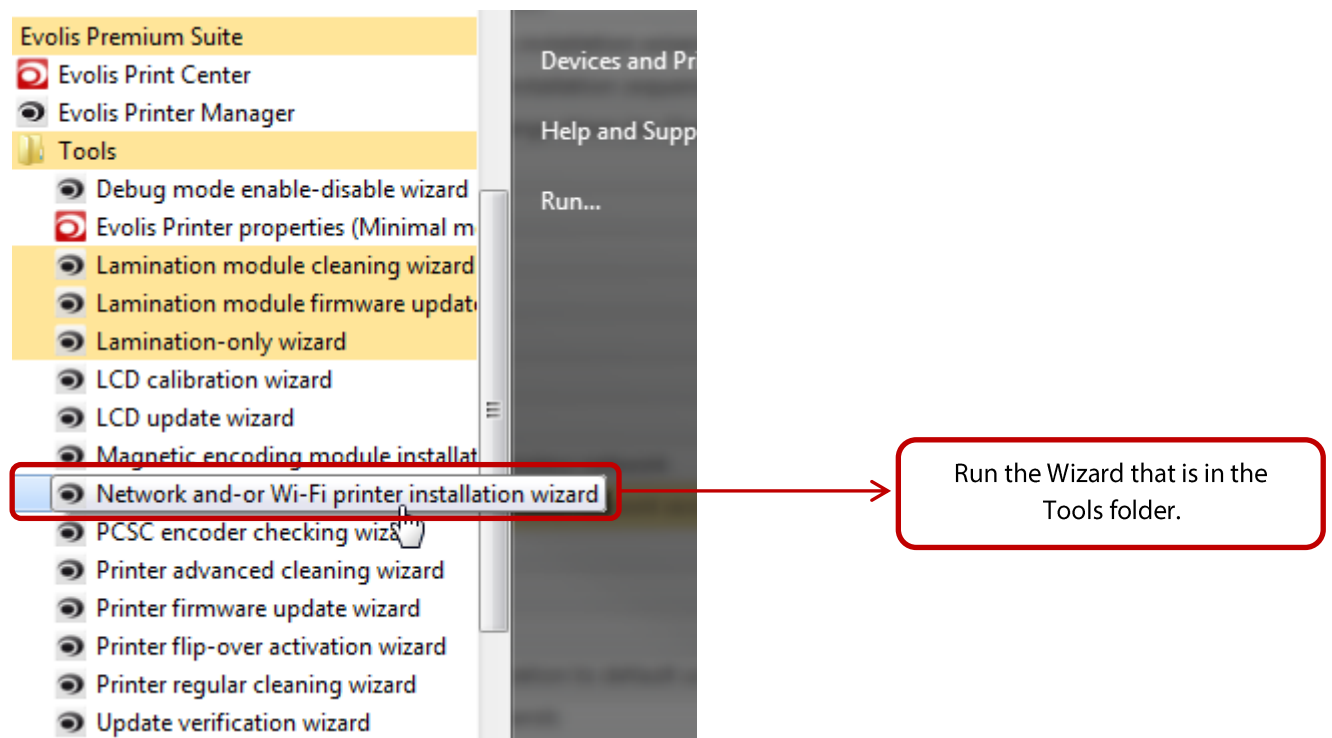


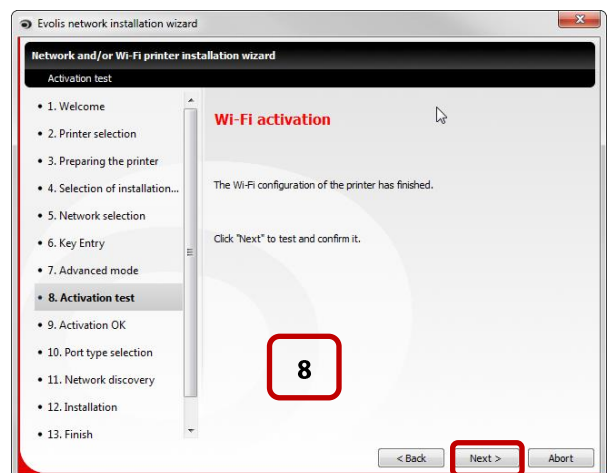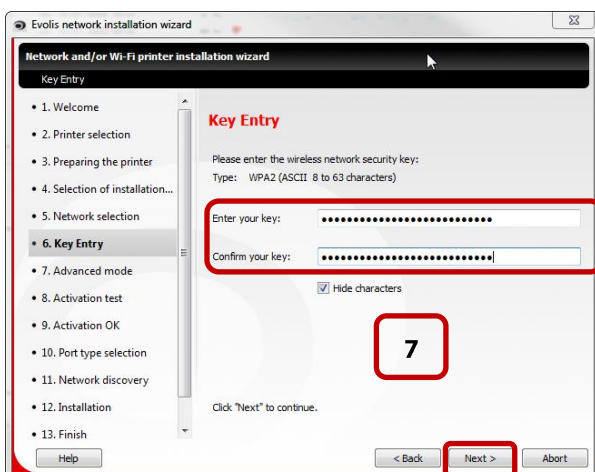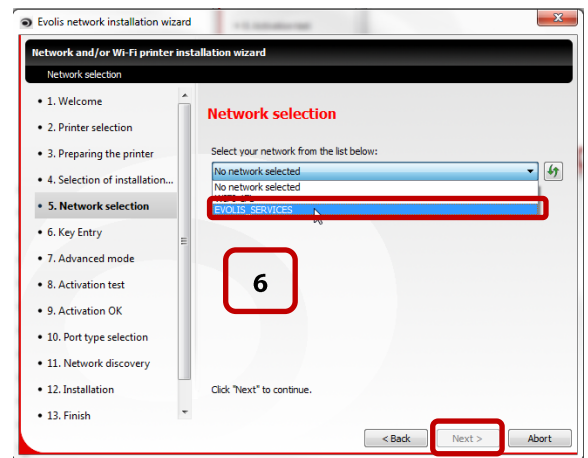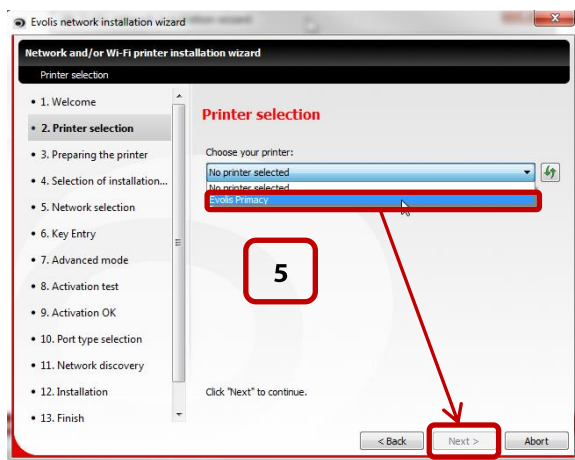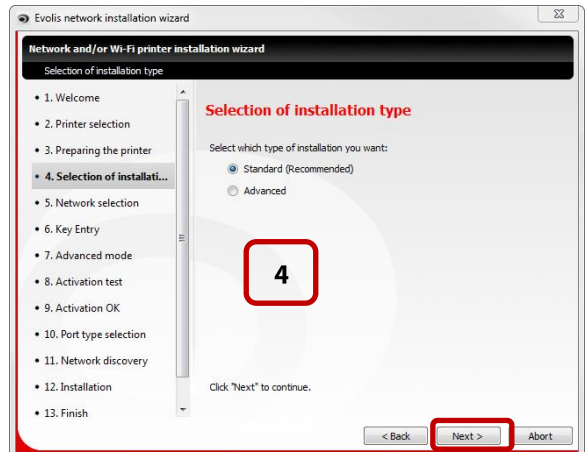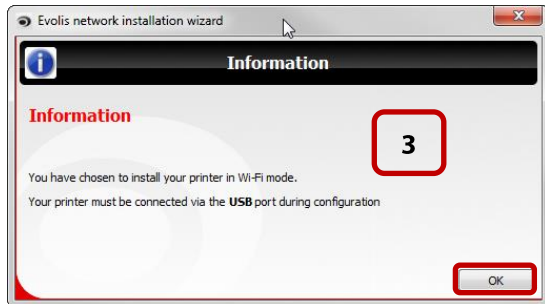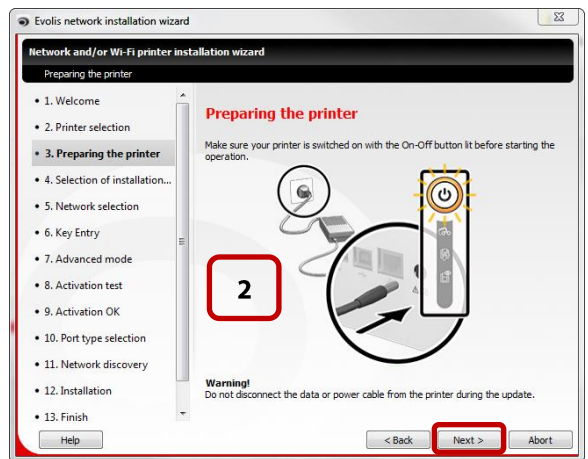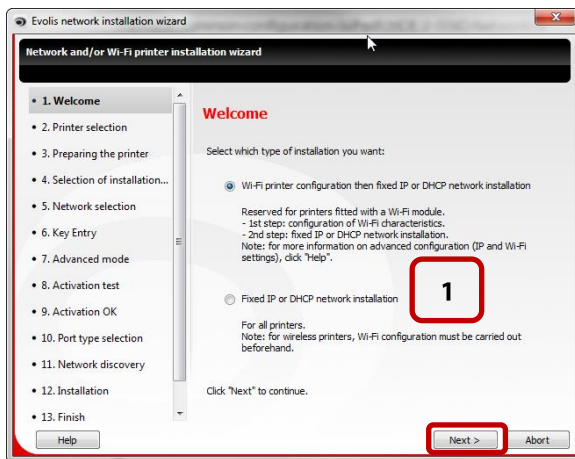



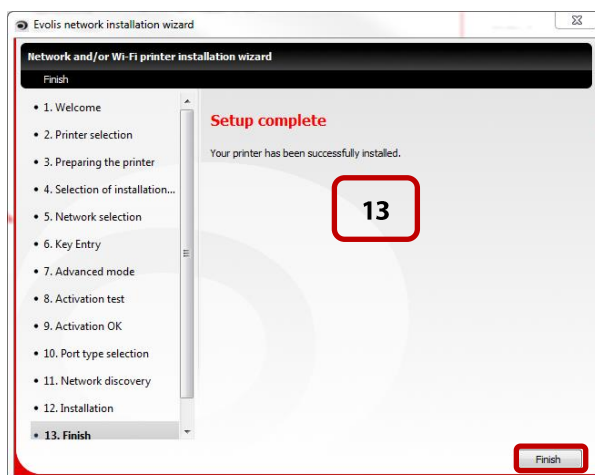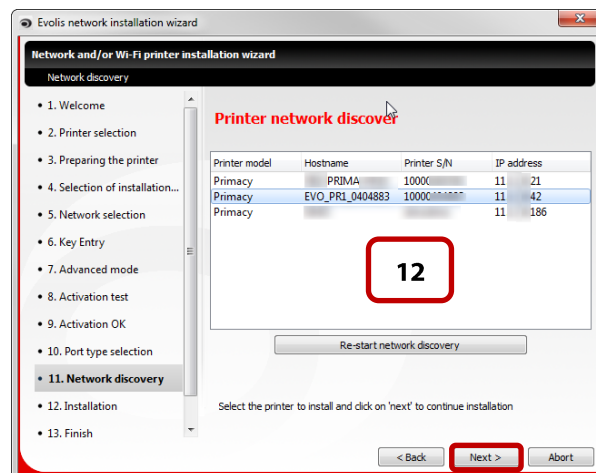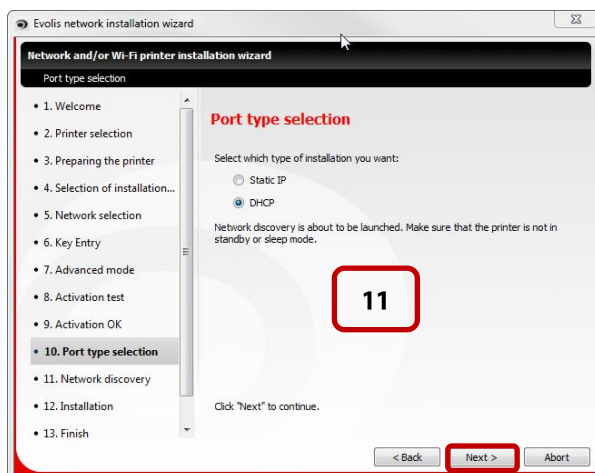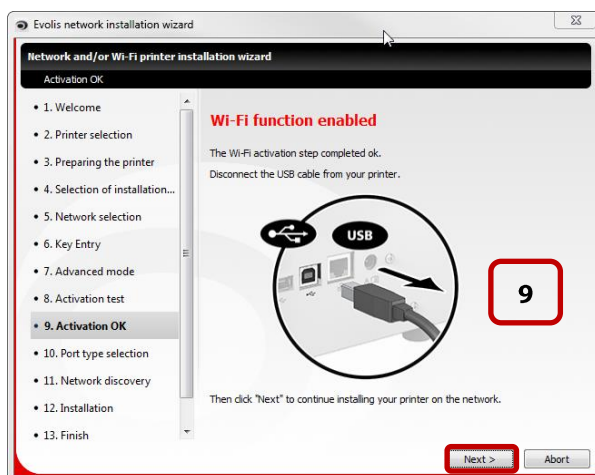

**You can check the newly installed printer**

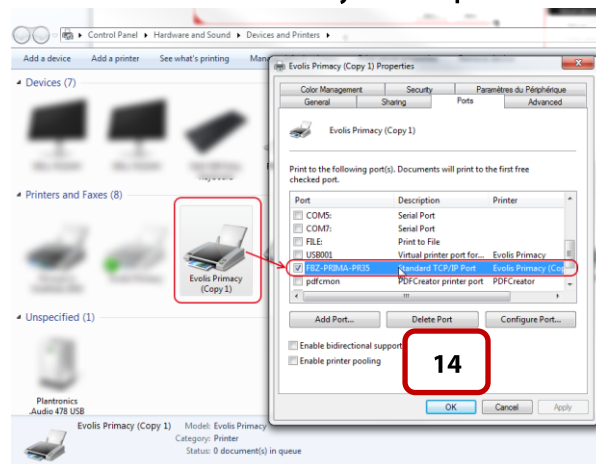



## 5. Wi-fi setup via command line

Connect first your printer using the USB cable, to send commands to the printer, refer to [this section](#).  
Collect network information, please refer to [this section](#).

Below a matrix of the sequence commands to set all the available Wi-Fi parameter:

| Step | Command                                             | Short description                                                 | Possible Values                                                                                                                                                                                                                                                                                                                                                                                                                |
|------|-----------------------------------------------------|-------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Cwifi;RP20                                          | List available Wi-fi network                                      | Returns maximum 16 networks name to collect the name / SSID of the network.                                                                                                                                                                                                                                                                                                                                                    |
| 2    | Pip;192.168.1.25                                    | Set the IP address to "192.168.1.25" value                        | IP address<br>dhcp                                                                                                                                                                                                                                                                                                                                                                                                             |
| 3    | Rip                                                 | Read The IP address set or DHCP                                   | Auto or IP address                                                                                                                                                                                                                                                                                                                                                                                                             |
| 4    | Pwifi;MDE;2                                         | Disable the Wi-fi (0), Ad hoc (1), or connect to SSID network (2) | 0 : Wi-fi Disable<br>1 : Adhoc Mode<br>2 : SSID network                                                                                                                                                                                                                                                                                                                                                                        |
| 5    | Rwifi;MDE                                           | Read the Wi-fi mode                                               | 0 : Wi-fi Disable<br>1 : Adhoc Mode<br>2 : SSID network                                                                                                                                                                                                                                                                                                                                                                        |
| 6    | Pwifi;WLCH;13                                       | Set the Wi-fi channel                                             | 1 to 13 (check your network's equipment channel first)                                                                                                                                                                                                                                                                                                                                                                         |
| 7    | Rwifi;WLCH                                          | Read the Wi-fi channel                                            | 1 to 13                                                                                                                                                                                                                                                                                                                                                                                                                        |
| 8    | Pwifi;WSIO;Name_Of_SSID                             | Set the wireless LAN name (SSID)                                  | Name of the Wi-fi network                                                                                                                                                                                                                                                                                                                                                                                                      |
| 9    | Rwifi;WSIO                                          |                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 10   | Pwifi;WSTO;4                                        | Set the type of Wi-fi security                                    | The Wireless LAN security type for each individual SSID in the array.<br>0: No security<br>1: WEP 64<br>2: WEP 128<br>3: WPA-PSK with TKIP encryption<br>4: WPA2-PSK with TKIP or AES encryption<br>105: EAP-TLS or PEAPMSCHAPv2. RADIUS<br>106: WPA-TKIP Enterprise with Certification Verification will be skipped<br>WPA2-AES Enterprise with EAP-TLS or PEAPMSCHAPv2. RADIUS<br>Certification Verification will be skipped |
| 10   | Pwi-fi;WPP0; Keyphrase (i.e.WPAPassphrase123456789) | Set the password of your network                                  | contains 8 to 63 characters for WPA                                                                                                                                                                                                                                                                                                                                                                                            |
| 11   | Rwifi;all                                           | Check the values set previously                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 12   | Snetw                                               | Validate settings                                                 |                                                                                                                                                                                                                                                                                                                                                                                                                                |

## 8. Troubleshooting

### 1. Ensure that the settings has been validated

Each time you modify a network setting for your Evolis printer, you must validate settings:


- You may use the "Srs" (System Reset) command to proceed for a remote printer
- Unplug and plug again the power cable
- Send a Snetw command

### 2. Reset your Ethernet / WI-FI configuration to default using the power button (Zenius, Primacy, Elypso, KC200, KM5000 and KM2000):


If you keep pressed the power button when you start your printer, you can run three different sequences:

- Make a "St Card".
- Start in a "USB Generic Mode".
- Reset Ethernet or WI-FI configuration.

Schematic below, press the pushbutton and power on your printer

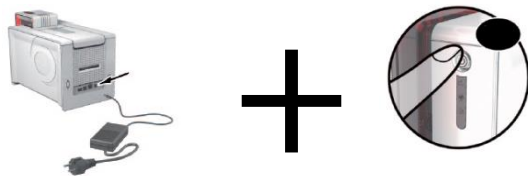

- Below you have the different case if you release the pushbutton during the start sequence, to reset the Network interfaces (Ethernet, WI-FI), press button 6 seconds :

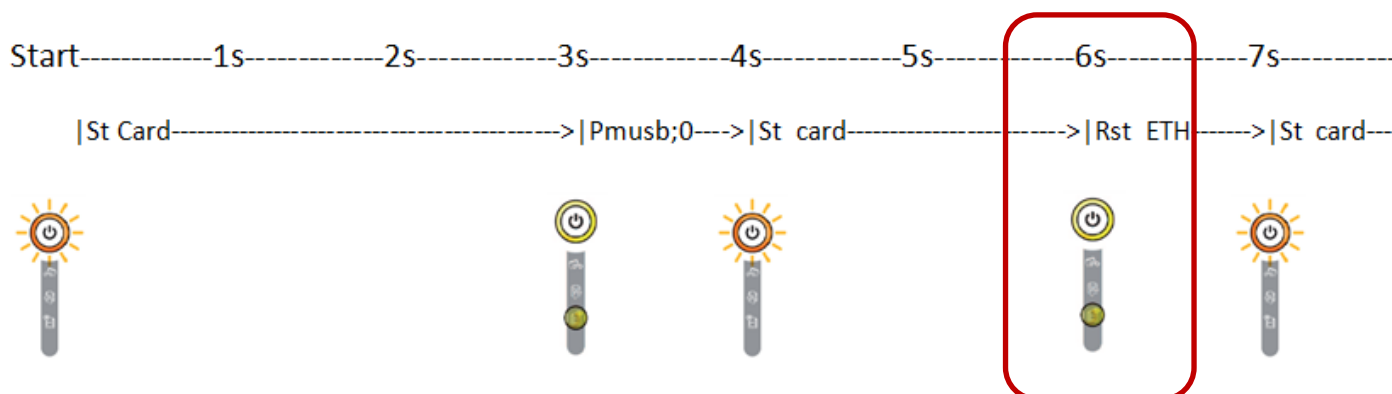

If you release the pushbutton at the timing above, you launch the "RESET ETH". This mode reset the printer Ethernet configuration. Process of the sequence:

- Disable WI-FI module, if it is present.
- Set the Ethernet configuration in DHCP mode.

### 3. Reset network settings using commands

In Command field, type sequentially:

--Pip;dhcp

--Snetw.

--Check your configuration by typing **Rip;1**. The result should be : **192.168.2.13 Auto** or **0.0.0.0 Auto** if you have **manual configuration**.

#### 4. Check connectivity with your printer

- Web interface

A simple way to ensure that your Evolis network printer is up and running is to type the IP address in the address bar of a web browser, example below:

← → ↻ 11.1.24.99

**evolIS**

Information **Network** Wireless About us

Hostname: FBZ-PRIMA-PR31  
Mac address: 00-1A-FD-05-49-F7  
IP address: 11.1.24.99

DHCP: ☐ Enable

IP address: 11 . 1 . 24 . 99  
Subnet mask: 255 . 255 . 255 . 0  
Gateway: 11 . 1 . 3 . 254  
Wins: 0 . 0 . 0 . 0  
IP multicast: 224 . 69 . 86 . 79

Restart Network

- Ping command

Send a ping command to concerned printer via a command line, example below:

```
c:\>ping 11.1.24.99

Pinging 11.1.24.99 with 32 bytes of data:
Reply from 11.1.24.99: bytes=32 time=1ms TTL=100
Reply from 11.1.24.99: bytes=32 time=2ms TTL=100
Reply from 11.1.24.99: bytes=32 time<1ms TTL=100
Reply from 11.1.24.99: bytes=32 time<1ms TTL=100

Ping statistics for 11.1.24.99:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 2ms, Average = 0ms

c:\>
```

- Hardware checking

Check that the light on the network interface of the printer is blinking, check your Ethernet cable, check network equipment (change port on your switch or router, test with another equipment).

#### 5. Check your computer's configuration

## 9. Most common Escape commands

| Command            | Short description                          | Comments |
|--------------------|--------------------------------------------|----------|
| Pip;192.168.1.25   | Set the IP address to "192.168.1.25" value |          |
| Rip                | Read The IP address set                    |          |
| Penm;255.255.255.0 | Set the network mask to "255.255.255.0"    |          |
| Renm               | Read the network mask value set            |          |
| Pegw;192.168.1.254 | Set the default gateway                    |          |
| Regw               | Read the gateway value set                 |          |

## 10. Appendix

### 6. What is a multicast address?

Evolis uses IGMP frame to send query to all printers connected to the network.

To use the discovery services offered by the Evolis Premium Suite, it is important that the network gateways support IGMP frames. To route Multicast traffic between two LANs, the gateway requires PIM Dense or PIM Sparse mode.

Example for Windows Server 2003: <http://www.labo-microsoft.org/articles/win/rad2003/7>

The default Evolis Multicast address is 224.69.86.79.

To know the multicast address of your Evolis printer, use the **"Rmip"** command

### 7. How is set the hostname for Primacy or Zenius printer

The printer name (hostname) is automatically set as EVO\_NNN\_XXXXXXX, where:

**EVO** is the root for Evolis products

NNN varies with the printer model:

**PR1** for Primacy

**ZE1** for Zenius

XXXXXXX is obtained from the printer's serial number, e.g. EVO\_PR1\_0001234 for serial number

Z710001234 Evolis limits the hostname to 15 characters according to the Windows Netbios limitations:

<http://support.microsoft.com/kb/909264/en-us>

To know the hostname of your Evolis printer, use the **"Rehn"** command

### 8. Mac address on Evolis Printer

Generated from the printer's serial number with the Evolis **00-1A-FD** header (Evolis "OUI" - Organisationally Unique Identifier).

For example, for the serial number P07100001234, the MAC address is 00-01-FD-00-04-D2.

00-04-D2 is the hexadecimal transcription of the decimal value 001234.


MAC address is visible on a sticker underneath the printer

### 9. What is DHCP ?

All Evolis printers are configured DHCP (**D**ynamic **H**ost **C**onfiguration **P**rotocol) out of the box, this means if your network has an equipment that delivers DHCP lease automatically, then you may not need more configuration.

To retrieve the IP address that is set by your network equipment (mostly router or Server), then connect to its interface and look for the Evolis Equipment. The network equipment installation is not held by the Evolis support team but the IT department that is in charge of your infrastructure (optionally a third party company).

DHCP table example:

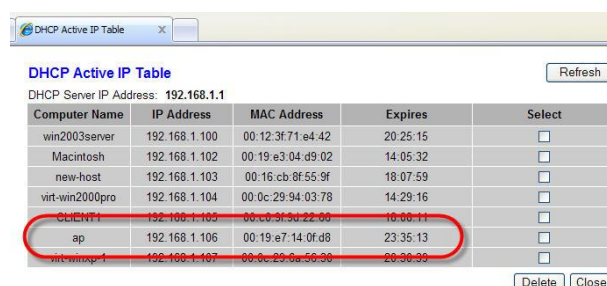

| Computer Name   | IP Address    | MAC Address       | Expires  | Select                   |
|-----------------|---------------|-------------------|----------|--------------------------|
| win2003server   | 192.168.1.100 | 00:12:3f:71:e4:42 | 20:25:15 | <input type="checkbox"/> |
| Macintosh       | 192.168.1.102 | 00:19:e3:04:d9:02 | 14:05:32 | <input type="checkbox"/> |
| new-host        | 192.168.1.103 | 00:16:cb:8f:55:9f | 18:07:59 | <input type="checkbox"/> |
| virt-win2000pro | 192.168.1.104 | 00:0c:29:94:03:78 | 14:29:16 | <input type="checkbox"/> |
| CLICNT1         | 192.168.1.105 | 00:c0:3f:3d:22:00 | 18:06:11 | <input type="checkbox"/> |
| ap              | 192.168.1.106 | 00:19:e7:14:0f:d8 | 23:35:13 | <input type="checkbox"/> |
| virt-winxp-1    | 192.168.1.107 | 00:0c:29:0a:56:38 | 28:38:39 | <input type="checkbox"/> |

**This information is mandatory to be able to make your Evolis printer to work correctly on your network.**

## 10. Retrieve compliant configuration from a computer

Most of the time, it is possible to retrieve a compliant configuration using the network utility that is in your Operating system:

- On Microsoft Windows Operating System, use the IPCONFIG utility (optionally with /all parameter), example below (to access the MS-DOS prompt, use Windows key + R and type cmd.exe then validate by ENTER) :

```
C:\Users\UserProfile>IPCONFIG /ALL
Ethernet adapter Local Area Connection:

Media State . . . . .: Media connected
Connection-specific DNS Suffix .: Mydomain.com
Description . . . . .: Intel(R) Ethernet Connection I217-LM
Physical Address. . . . .: ED-F4-B0-0F-71-FB
DHCP Enabled. . . . .: Yes
Autoconfiguration Enabled . . .: Yes
IPv4 Address. . . . .: 192.168.106.1(Preferred)
Subnet Mask . . . . .: 255.255.255.0
Default Gateway . . . . .:
NetBIOS over Tcpip. . . . .: Enabled
```

For Windows and Mac OS environment, use the ifconfig command:

```
root@evolis-PC: /home/evolis
evolis@evolis-PC:~$ sudo su
[sudo] password for evolis:
root@evolis-PC: /home/evolis# ifconfig
ens33      Link encap:Ethernet  HWaddr 00:0c:29:2b:b6:67
           inet addr:192.168.231.128  Bcast:192.168.231.255  Mask:255.255.255.0
           inet6 addr: fe80::a495:e989:98a5:b8d2/64  Scope:Link
           UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
           RX packets:22 errors:0 dropped:0 overruns:0 frame:0
           TX packets:95 errors:0 dropped:0 overruns:0 carrier:0
           collisions:0 txqueuelen:1000
           RX bytes:2272 (2.2 KB)  TX bytes:9900 (9.9 KB)
           Interrupt:19 Base address:0x2000

lo         Link encap:Local Loopback
           inet addr:127.0.0.1  Mask:255.0.0.0
           inet6 addr: ::1/128 Scope:Host
           UP LOOPBACK RUNNING  MTU:65536  Metric:1
           RX packets:345 errors:0 dropped:0 overruns:0 frame:0
           TX packets:345 errors:0 dropped:0 overruns:0 carrier:0
           collisions:0 txqueuelen:1
           RX bytes:26253 (26.2 KB)  TX bytes:26253 (26.2 KB)

root@evolis-PC: /home/evolis#
```

Pay attention that an IP address must be unique on the network.

### EUROPE - MIDDLE-EAST - AFRICA

Evolis - 14 avenue de la Fontaine - ZI Angers-Beaucouzé  
49070 Beaucouzé - France  
T +33 (0) 241 367 606 - F +33 (0) 241 367 612  
info@evolis.com

**AMERICAS** - Evolis Inc. - Fort Lauderdale - evolisin@evolis.com

**ASIA-PACIFIC** - Evolis Asia Pte Ltd - Singapore - evolisia@evolis.com

**CHINA** - Evolis China - Shanghai - evolischina@evolis.com

**INDIA** - Evolis India - Mumbai - evolisindia@evolis.com